

**20210811**  
**User Manual**

# Hand Control Programming- TDH15

---

# Contents

<b>Contents</b> .....	<b>2</b>
<b>Disclaimer</b> .....	<b>3</b>
<b>1. User Interface Guide</b> .....	<b>4</b>
<b>2. Reset</b> .....	<b>5</b>
<b>3. Adjusting the Height</b> .....	<b>6</b>
<b>4. Setting the Upper and Lower Height Limit</b> .....	<b>6</b>
<b>5. Power Saving Function - Waking up the Control</b> .....	<b>7</b>
<b>6. Restore Factory Setting</b> .....	<b>7</b>

## Disclaimer

This user manual is ONLY for generic TiMOTION products. Manufacturers may have altered product settings causing them to differ from this user manual. Please contact the manufacturer for a revised manual if the product settings are different than this manual.

# 1. User Interface Guide



Up and down buttons

## 2.Reset

1. Simultaneously press ▲ and ▼ for 3 seconds. Continue pressing the buttons until both columns are in the lowest position. When finished with the reset, the control box will make a “beep” sound and the buttons can be released.



2. When finished with the reset, the display will show the starting height.
3. Users must conduct a reset when operating the desk for the first time.

## 3.Adjusting the Height

Press ▲ or ▼ button until the desk reaches the preferred height.

## 4.Setting the Upper and Lower Height Limit

### A. Setting the upper height limit:

- (1) Adjust the desk to the preferred upper height limit.
- (2) Press ▲ and ▼ buttons together for less than 3 seconds, holding ▲ and release ▼ button. [\(Note 1\)](#)
- (3) Re-press ▼ for more than 3 times at a slow pace.
- (4) A beeping sound will notify you that the process has been completed.

### B. Disable the upper height limit:

- (1) Move the desk to the upper height limit being set.
- (2) Repeat instructions #2~4 above to disable the upper limit setting.

### C. Setting the lower height limit:

- (1) Adjust the desk to the preferred lower height limit.
- (2) Press ▲ and ▼ buttons together for less than 3 seconds, holding ▼ and release ▲ button. [\(Note 2\)](#)
- (3) Re-press ▲ for more than 3 times at a slow pace.
- (4) A beeping sound will notify you that the process has been completed.

### D. Disable the lower height limit:

- (1) Move the desk to the lower height limit being set.
- (2) Repeat instructions #2~4 above to disable the lower limit setting.

[Note 1: Some control boxes may not support setting the upper and lower height limit functionality.](#)

[Note 2: More than 3 seconds will direct to "Reset" mode.](#)

## 5. Power Saving Function - Waking up the Control

- The digital display automatically turns off if no buttons are pressed within 25 seconds. Press any button to light up the display again.
- The system goes into <math><0.1\text{W}</math> standby mode (Note 3) if no buttons are pressed within 30 seconds. Long pressing any button will wake up the system and show desk height on the digital display.

Note 3: It depends on the control box whether it will support 0.1W standby mode or not.

## 6. Restore Factory Setting

- (1) Refer to Chapter 2-Reset: after the “beep” sound, press ▲ and ▼ buttons together for 15 seconds, the control box will twice make a “beep” sound.
- (2) The settings below will restore to the original factory settings:
  - Memorized position
  - Desk starting height
  - Upper and lower height limit
  - T-touch or TCS1 sensitivity